


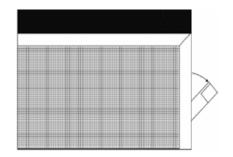


## \*24 volt Electronic Air Cleaner Replacement Media

## **Installation Instructions**

- 1) Turn the thermostat fan switch to the "OFF" position.
- 2) Turn off power to the furnace/air handler.
- 3) Open the filter access door or grille.
- 4) Unplug the power supply cord from the air cleaner power head.
- 5) Remove the air cleaner from the filter rack or return air grille.
- 6) Open the air cleaner remove the old media pad and discard.
- 7) If dust has accumulated on the outer screen of the air cleaner, clean with a  $dry_{\square}$  brush or vacuum.
- 8) Position the new replacement media pad so that it is centered within the air cleaner frame
- 9) Close and re-latch the air cleaner.
- 10) Return the air cleaner to its location in he furnace/air handler or return air grille.
- 11) Plug the power supply cord into the air cleaner once it is securely in place (fig 6).
- 12) Close the filter access door or grille.
- 13) Switch the thermostat back to the "ON" position. For optimum results, the furnace or air handler should be run continuously with the fan switch in the "ON" position, rather than the "AUTO" position.
- 14) Because of variations in humidity and temperature, the new media pad may make a slight snapping sound when first installed. This is normal and should stop within 24 hours of operation.





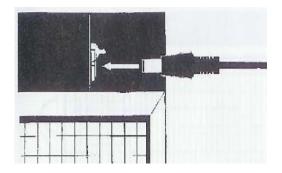

\*Replacements for Dynamic 24 volt electronic filters